

## ASSEMBLY INSTRUCTIONS:

Product Code : SL38L1

Product Name: Add-on Adjustable Arms

\*Compatible with Endeavour Chair and Milan Chair

## TIME REQUIRED:

10 minutes

## TOOLS REQUIRED:

Screwdriver, Electric Drill, Pencil, Measuring tape/Ruler

\*Tools are not included.

## SKILL REQUIRED:

Easy  Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert. For most products, two persons are recommended.

### NOTE

- As this is a commercial product, some intermediate skills may be required.
  - No pre-drill holes or markings are provided on our table or desk tops.
  - Please check you have all hardware before assembling.
- If you are missing any hardware, please contact your Rapidline reseller. Please ensure you have the name of the item, required hardware part and quantity.
  - Please retain your receipt as proof of purchase to validate your warranty.
- Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
- Remove all wrapping materials, including staples and packing straps before you start to assemble
  - Keep all hardware parts out of reach of children.

### CAUTION

- Heavy product. Do not attempt to lift or move without help
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.

### WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
- Failure to follow these warnings could result in serious injury.

# ASSEMBLY INSTRUCTION

Remove all items from the carton . Verify all pieces before assembly.

## PARTS LIST

KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	2	ARMREST	4	2	FLAT WASHER
2	2	ARM BRACKET	5	2	LOCK WASHER
3	8	ARM BRACKET SCREW	6	2	ADJUSTMENT KNOB


INSTRUCTION :

### STEP1

■ USE (3) ARM BRACKET SCREW TO FIX (2) ARM BRACKETS TO CHAIR SEAT AS DRAWN BELOW.

### STEP2

■ INSERT ASSEMBLED (1) ARMRESTS INTO (2) ARM BRACKETS . ALIGN THE PRE-DRILLED HOLES OF (1) ARMREST THEN INSERT THE (6) ADJUSTMENT KNOB WITH (4) FLAT WASHER & (5) LOCK WASHER UPWARD INTO THE HOLES OF (2) ARM BRACKETS AND TIGHTEN KNOBS FIRMLY.

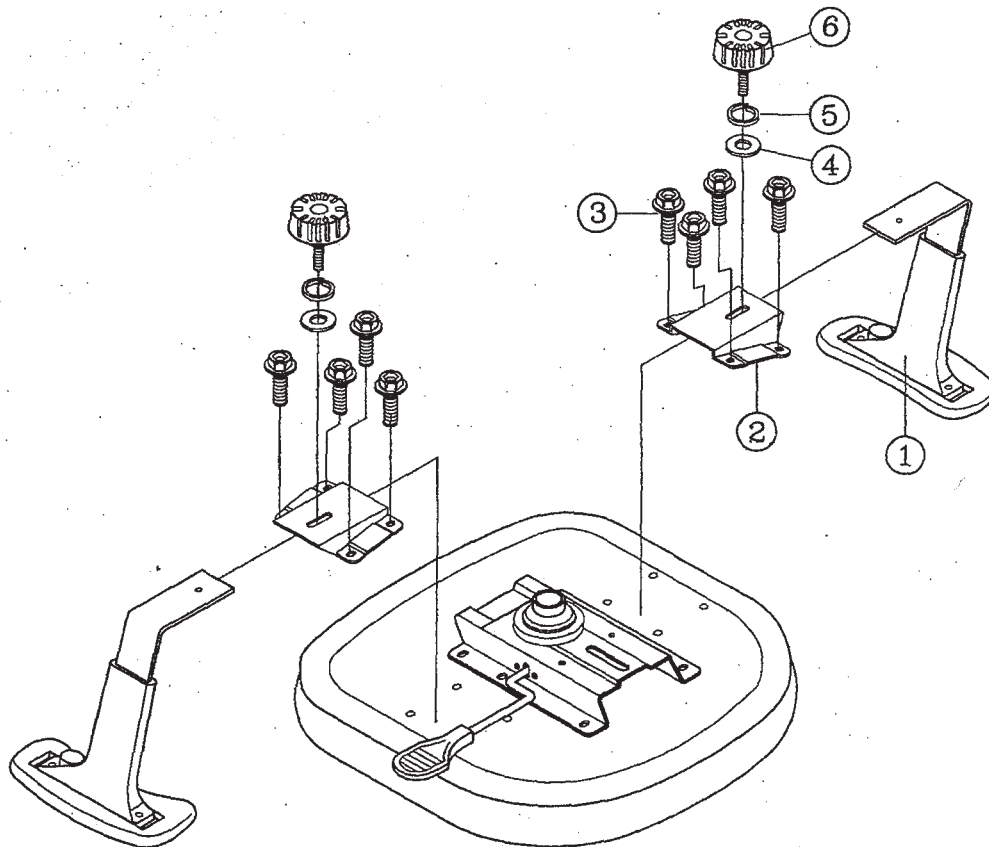

**rapidline**  
FURNITURE FOR TODAY

## WARNING !

- ✓ USE THE PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- ✓ DO NOT USE CHAIR AS STEP STOOL / LADDER.
- ✓ DO NOT USE CHAIR UNLESS ALL BOLTS , SCREWS , AND KNOBS ARE TIGHT . AT LEAST EVERY SIX MONTHS, CHECK ALL BOLTS , SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- ✓ IF ANY PARTS ARE MISSING , BROKEN , DAMAGED OR WORN , STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- ✓ FAILURE TO FOLLOW THESE WARNINGS CAN RESULT IN SERIOUS INJURY.